

# Kalahari & GlowPlus

 


# Kalahari Room Heater Natural Gas

	<b>Description</b>	<b>Part No.</b>
001	Front Cover Assembly	05-27715-00
002	Filter Assembly - Small	05-28136-00
003	Operational Panel (Kalahari 18)	15-00525-00
003	Operational Panel (Kalahari 25)	15-00145-00
004	Base	15-00137-00
005	Filter Assembly - Large	05-29132-00
006	Carry Handle	05-61631-00
007	Reinforcing Panel	15-00147-00
008	Reinforcing Panel Bracket	15-00148-00
010	Back Cover Assembly	15-00123-00
011	Louver Assembly	15-00129-00
012	Twist Clip	09-77949-00
100	Burner Cover	15-00294-00
101	Thermocouple Cap P	05-61165-00
102	Thermocouple Holder	15-00316-00
118	Burner Assembly	15-00292-00
129	Burner Injector	08-50260-00
170	Gas Pipe Assembly	15-00224-00
171	Gas Pipe Holder	15-00226-00
172	O-ring P-8	09-61080-00
174	Lock Nut	08-44642-00
175	Gasket	09-03955-00
200	Gas Control Assembly	15-00246-00
415	Heat Exchanger	15-00165-00
416	Heat Exchanger Cover Upper	15-00170-00
417	Heat Exchanger Cover	15-00174-00
418	Partition Panel	15-00173-00
419	Heat Exchanger Lid	15-00171-00
420	Electrode Assembly	15-00305-00
700	Thermocouple	05-60110-00
710	Temperature Fuse	05-28630-00
717	Silicone Tube	09-77845-00
725	Transformer	15-00407-00
728	Fan Assembly	15-00205-00
745	PCB Assembly	15-00389-00
746	Filter PCB Assembly	15-00378-00
863	Screw	31-29029-00

# Kalahari 18 and 25 – Natural Gas - Electrical

Models: Kalahari-18-NG and Kalahari-25-NG

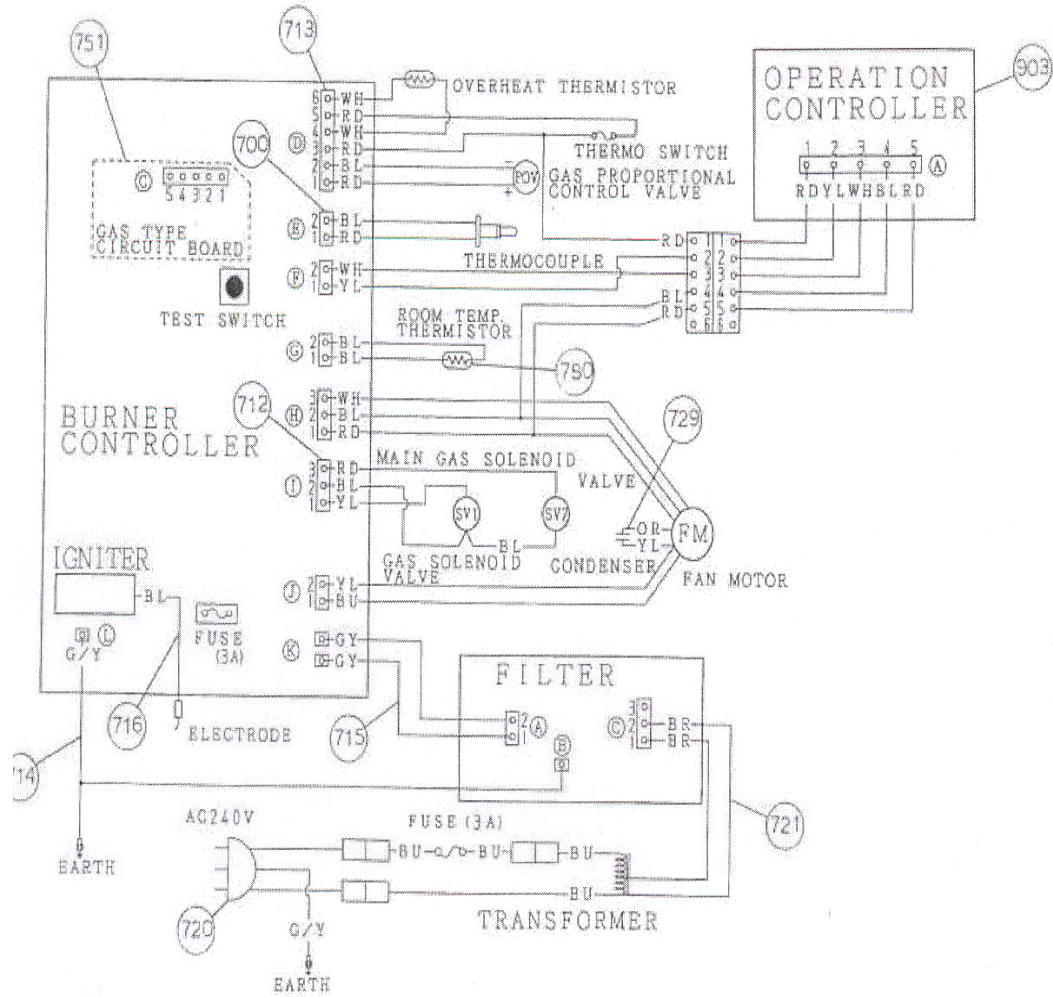


# Kalahari Room Heater 18 and 25 Models - NG

<b>Item</b>	<b>Description</b>	<b>Part No.</b>
713	Fuse Wiring Assembly	15-00406-00
751	Gas Type Connector (Kalahari 18)	15-00542-00
751	Gas Type Connector (Kalahari 25)	15-00452-00
780	Thermistor Assembly	05-60673-00
903	Remote Control	15-00332-00

# Kalahari 18 and 25 – LPG - Electrical

 Models: Kalahari-18-LPG and Kalahari-25-LPG

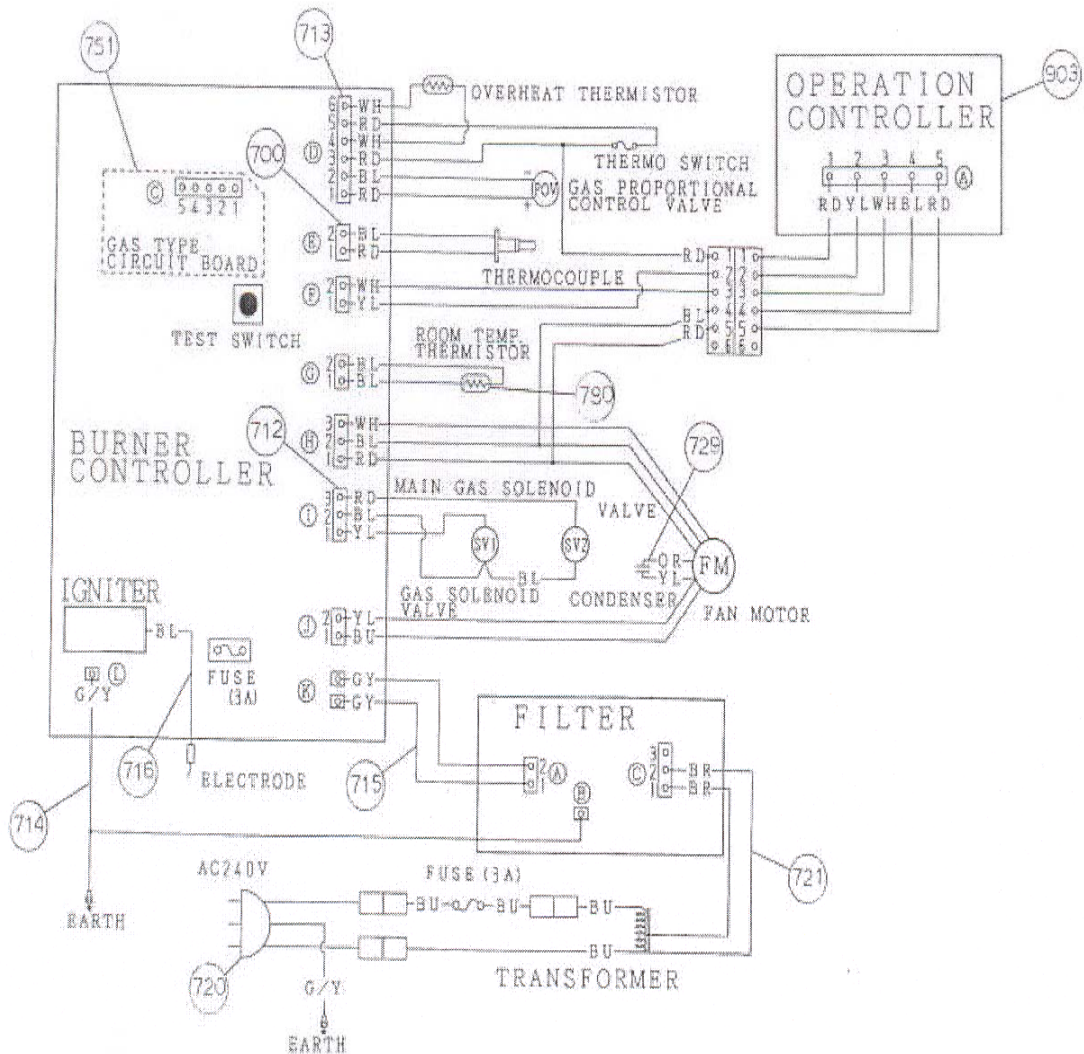

# Kalahari Room Heater 18 and 25 Models - LPG

 
<b>Item</b>	<b>Description</b>	<b>Part No.</b>
713	Fuse Wiring Assembly	15-00743-00
714	Earth Wiring Assembly	15-00402-00
751	Gas Type Connector (Kalahari 25)	15-00781-00
780	Thermistor Assembly	05-60673-00
903	Remote Control	15-00333-00



# Kalahari Room Heater 18 and 25 Models -LPG

Item	Description	Part No.
001	Front Cover Assembly	05-27715-00
002	Filter Assembly - Small	05-28136-00
003	Operational Panel (Kalahari 18)	15-00525-00
003	Operational Panel (Kalahari 25)	15-00145-00
004	Base	15-00620-00
005	Filter Assembly - Large	05-29132-00
006	Carry Handle	15-00146-00
007	Reinforcing Panel	15-00147-00
008	Reinforcing Panel Bracket	15-00148-00
010	Back Cover Assembly	15-00613-00
011	Louver Assembly	15-00625-00
012	Twist Clip	09-77949-00
101	Thermocouple Holder	15-00661-00
118	Burner Assembly	15-00673-00
129	Burner Injector	05-36887-00
170	Gas Pipe Assembly	15-00725-00
172	O-Ring P-8	09-61080-00
174	Lock Nut	08-44642-00
175	Gasket	09-03955-00
180	Gas Pipe Holder A	15-00734-00
181	Gas Pipe Holder B	15-00735-00
182	Gas Pipe Holder C	15-00736-00
183	Burner Angle R	05-61783-00
185	Injector Connector	05-61684-00
190	Damper	05-61202-00
200	Gas Control Assembly (Kalahari 18)	15-00531-00
200	Gas Control Assembly (Kalahari 25)	15-00245-00
415	Heat Exchanger	15-00659-00
416	Heat Exchanger Cover Upper	15-00650-00
417	Heat Exchanger Cover	15-00651-00
418	Partition Panel	15-00173-00
419	Heat Exchanger Lid	15-00654-00
420	Electrode Assembly	15-00695-00
700	Thermocouple	15-00744-00
710	Temperature Fuse	05-28630-00
717	Silicone Tube	09-77845-00
725	Transformer	15-00407-00
728	Fan Assembly	15-00205-00
745	PCB Assembly	15-00389-00
746	Filter PCB Assembly	15-00378-00
803	Pan FT Screw 4 x 6	09-11641-00
804	Pan Screw 4 x 8	09-11142-00
805	Pan FT Screw 4 x 8	09-11242-00
814	Pan SW Screw 4 x 8	09-40142-00
863	Screw	31-29029-00
901	Hose	05-38556-00

# GlowPlus – Natural Gas and LPG

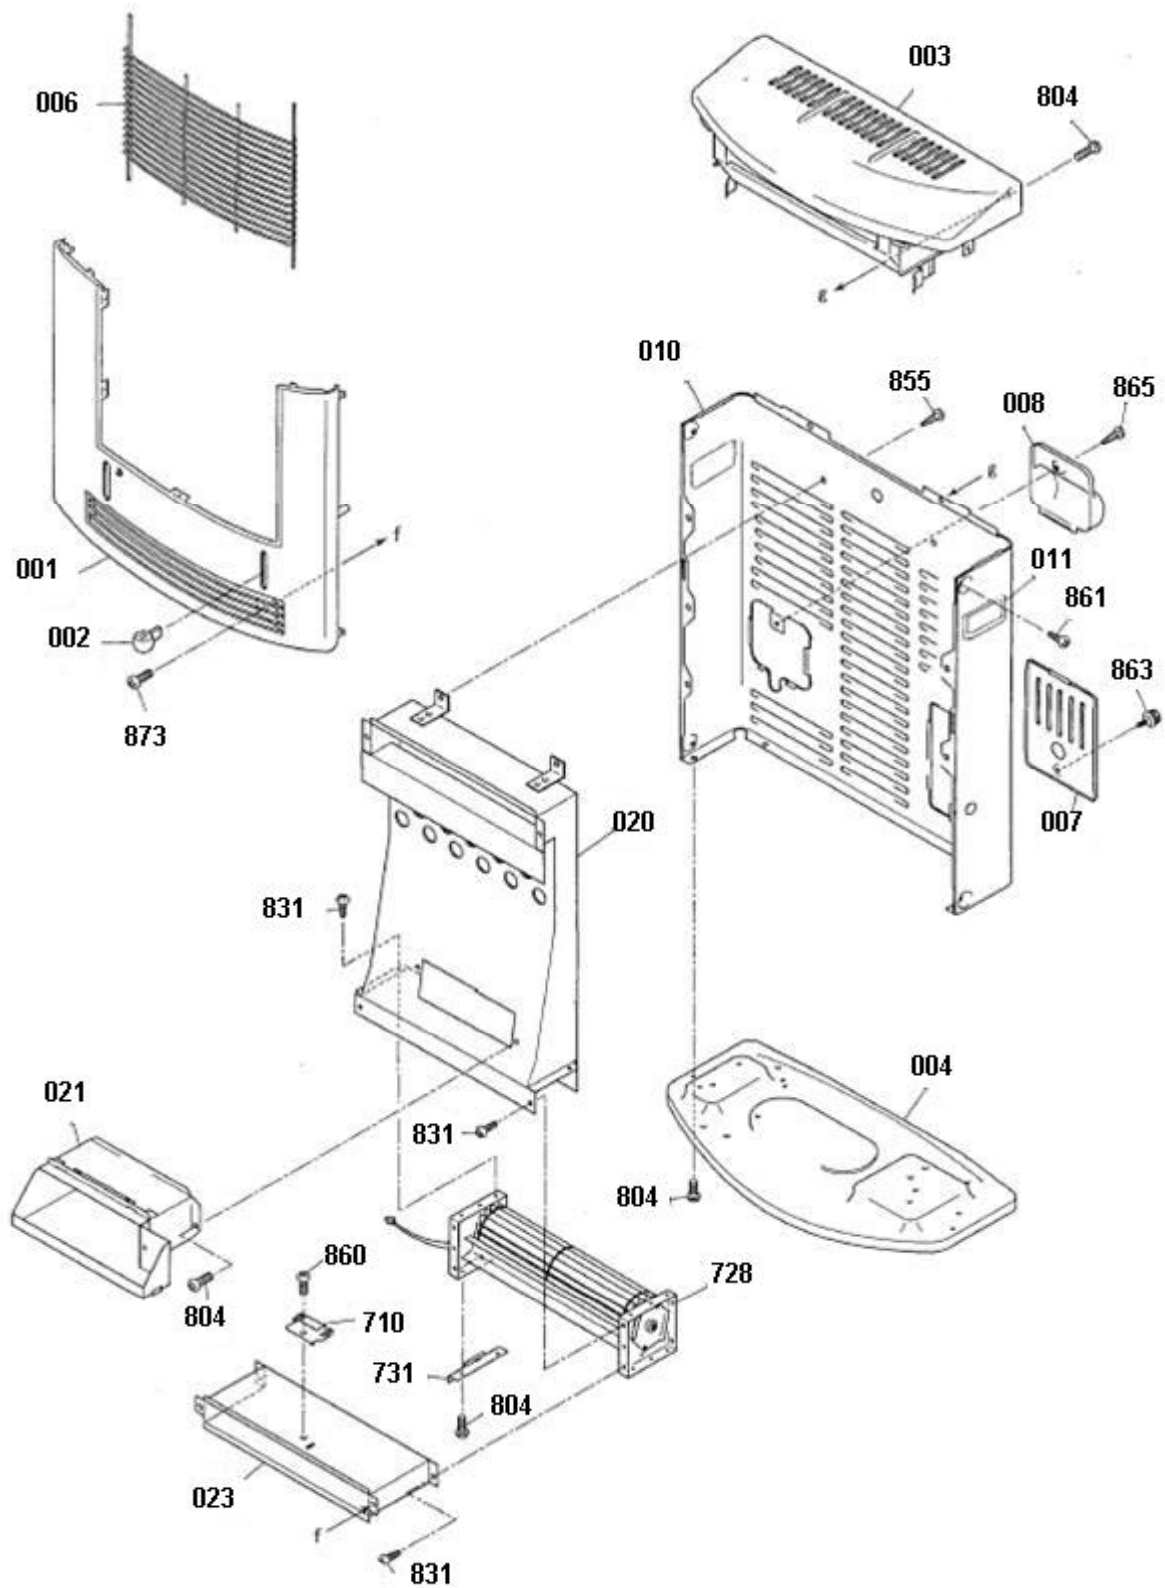


# GlowPlus Radiant Heater

## Natural Gas and LPG

Item	Description	Part No.
001	Front Cover	05-63155-00
002	Knob	05-61621-00
003	Top Cover	05-63157-00
004	Base	05-61626-00
006	Guard Assembly	05-63141-00
007	Cover A	05-61644-00
008	Cover B	05-61645-00
010	Back Cover	05-63023-00
011	Carry Handle	05-61631-00
020	Fan Intake Duct	05-63051-00
021	Fan Intake Duct C	05-61696-00
023	Fan Outlet Duct	05-61690-20
710	Fuse	05-28630-00
728	Fan Assembly	05-61702-00
731	Fan Mounting Bracket	05-61707-00
804	Pan Screw FT 4 x 8	09-11642-00
831	Pan Screw TP 3 x 6	09-46131-00
860	Screw FT 4 x 8	09-11842-00
861	Screw Pan TP	09-46243-00
863	Screw	31-29029-00
865	Pan Screw FT 4 x 8	09-11232-00
873	Screw FT 4 x 8	09-11842-00
<b>Gas Conversion Kits</b>		
NI	Gas Conversion Kit – NG to LPG	05-63418-51
NI	Gas Conversion Kit – LPG to NG	05-63419-51
 
# GlowPlus – Natural Gas and LPG

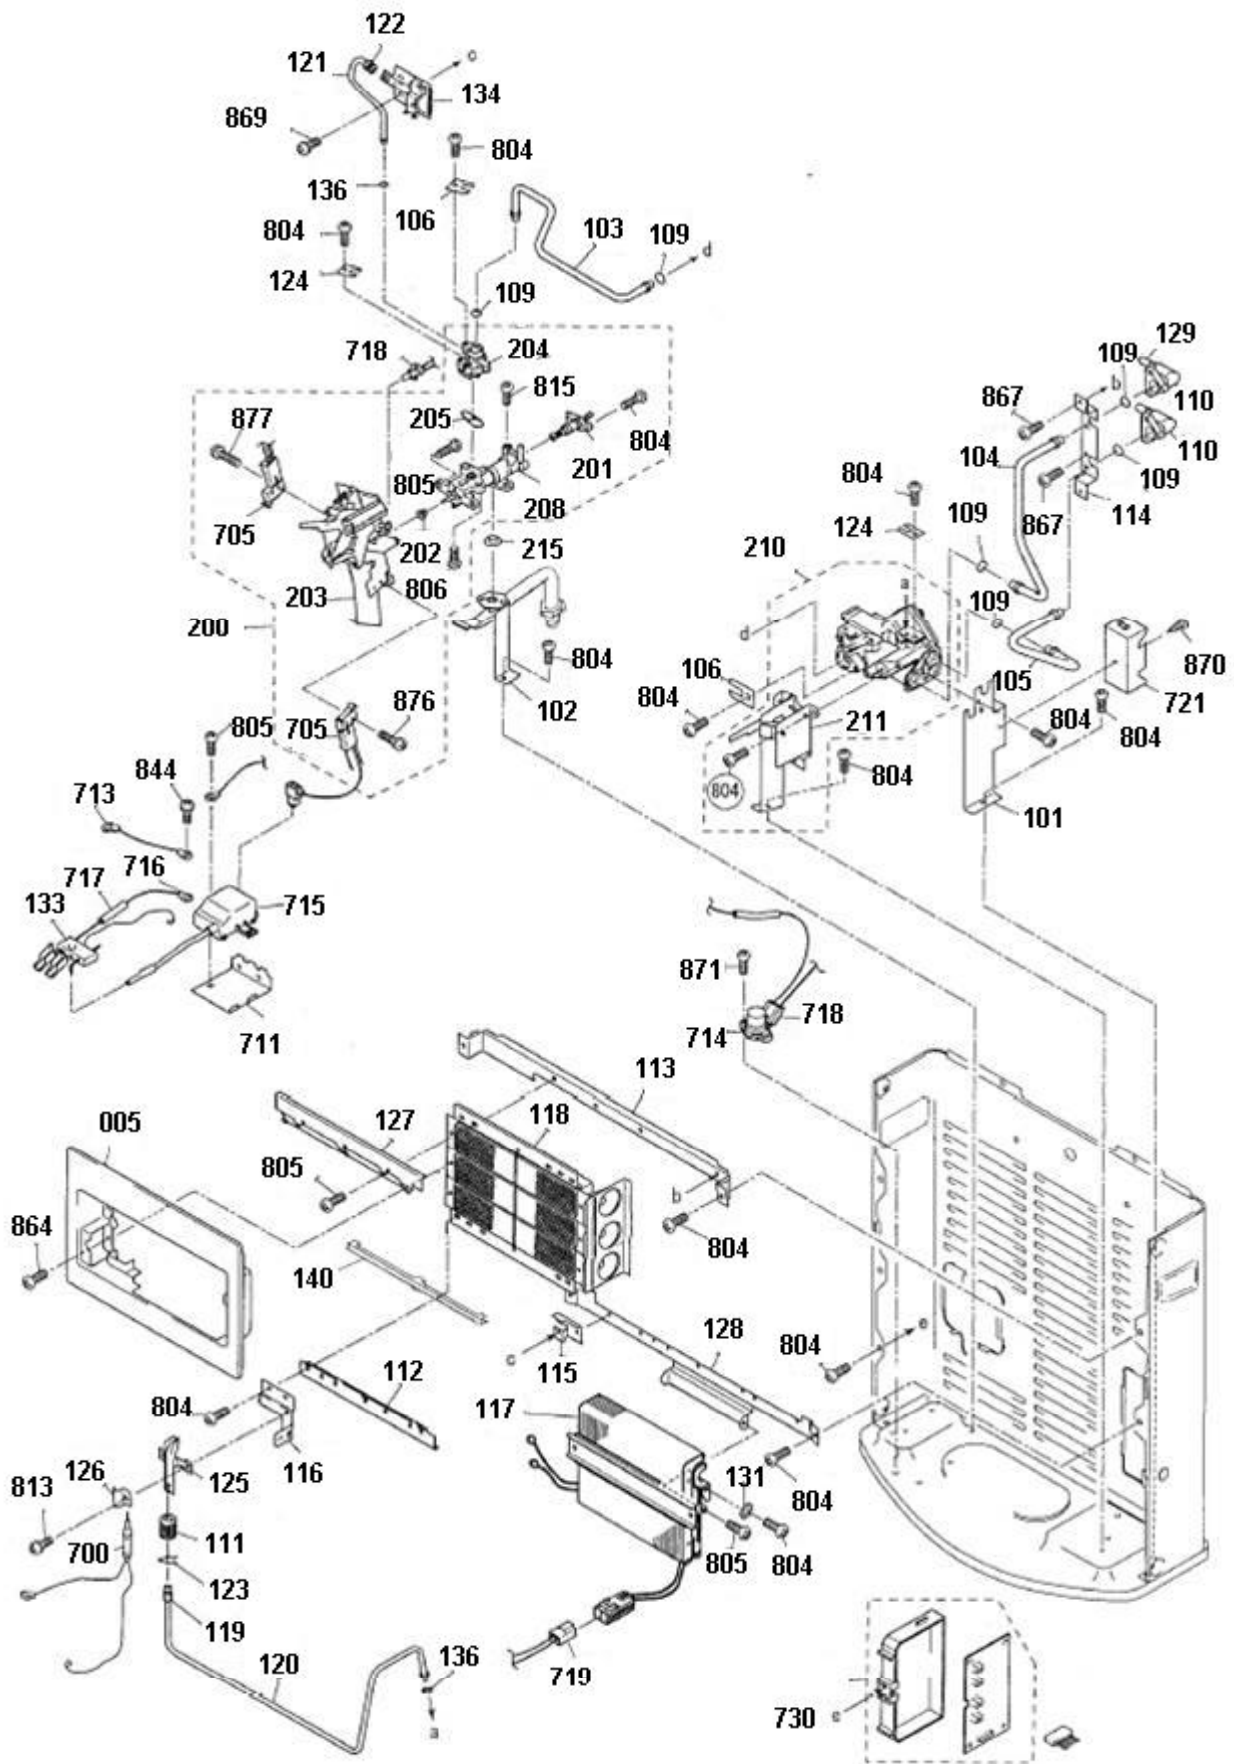

## GlowPlus Radiant Heater

### Natural Gas and LPG

Item	Description	Part No.	
102	Inlet Gas Pipe Assembly	05-63151-00	
103	Main Pipe	05-61685-00	
106	Pipe Retainer Nut	08-44642-00	
107	Hose (Not illustrated)	890306	
109	O-Ring P-8	09-61080-00	
111	Pilot Filter	04-40817-00	
117	Thermopile Assembly	05-61790-00	
118	Burner Assembly	05-63111-00	
119	Pilot Injector	NG	04-39164-00
		LPG	04-39182-00
120	Ignition Pilot Pipe	05-61789-00	
121	Safety Pilot Pipe	05-61788-00	
122	Safety Pilot Injector	LPG	05-96704-00
		NG	05-96746-00
123	Snap Pin	05-98239-00	
124	Pipe Retainer Nut	08-44727-00	
125	Pilot Burner Assembly	NG	05-63186-00
		LPG	05-68183-00
126	Thermocouple Holder D	05-10336-00	
129	Main Burner Injector	LPG	05-61911-00
		NG	05-63182-00
131	Clip	09-02224-00	
133	Thermocouple Assembly	05-61961-00	
134	Pilot Burner Assembly Right	08-64553-00	
136	O-Ring P-4	09-61040-00	
140	Burner Tile Bracket	05-63117-00	
200	Burner Control Assembly	05-61730-00	
201	Magnetic Valve	04-41704-00	
202	O-Ring Holder	05-61732-00	
203	Ignition Lever Assembly	05-61733-00	
204	Pilot Tube Connector	05-61733-00	
205	Gasket	08-27715-00	
208	Safety Valve	18-48681-00	
210	Burner Selector	LPG	05-63195-00
		NG	05-63196-00
211	Burner Selector Lever	05-63085-00	
215	Gasket	18-19112-00	
700	Thermocouple Assembly	LPG	05-61865-00
		NG	05-61866-00
705	Micro Switch	09-73769-00	
710	Fuse	05-28630-00	
711	Igniter Mounting Bracket	05-61823-00	
713	Millivolt Generator Wiring Assembly	05-61889-00	
714	Switch	09-73803-00	
715	Ignition Transformer	05-61847-00	
716	Quick Wiring Assembly	05-61869-00	
718	Wiring Assembly	05-61888-Z0	
719	Thermocouple Wiring Assembly	05-61839-00	
721	Battery Case Assembly	09-77735-00	
730	PCB	05-63130-00	